



# Measurements International

*Metrology is Our Science, Accuracy is Our Business™*

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

*Self-Calibration Quantum Hall Ratio/Resistance Bridge*



### Featuring

- ▶ Quantum Hall Applications Including Gallium Arsenide and Graphene Sample Measurements
- ▶  $V_{cr}$ ,  $V_{xx}$ , and  $V_{xy}$  Measurements
- ▶ Self-Calibration of the Binary Wound Current Comparator (27-bit) Plus Nanovolt Detector Reading
- ▶ Current Range from 1  $\mu A$  to 100 k $\Omega$
- ▶ Ratio 0 to 14:1
- ▶ Resistance Range 0.1  $\Omega$  to 100 k $\Omega$
- ▶ 7" Touch Screen with USB
- ▶ Best Accuracy < 15 ppb

Feature	Benefit
DCCT based.	Provides excellent stability and range linearity.
$V_{cr}$ , $V_{xx}$ and $V_{xy}$ measurements.	Supports dissipation and contact resistance checks.
< 15 parts in $10^{-9}$ ratio accuracy.	Allows sub-ppm high-stability measurements.
Ratio 0 to 14:1.	Compatible with both gallium arsenide and graphene sample measurements.
National lab continuity.	The only commercially available QHR resistance bridge used in primary or national laboratories worldwide.
Full DCC resistance range.	0.1 $\Omega$ to 100 k $\Omega$ .
Stable low currents.	1 $\mu A$ to 200 mA ensures ultra low noise measurements.



**Measurements International**  
*Metrology is Our Science, Accuracy is Our Business™*

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

Since 1994, Measurements International's (MI) 6010B, and 6010C technology has set the standard for DC Current Comparator (DCC) Resistance Bridge performance in calibration laboratories globally. The time has now come to advance this best-in-class series, taking advantage of twenty-first-century AccuBridge® technology.

Measurements International's major technological advantage in resistance measurements is the development of the first commercially available portable Quantum Hall System, 6800, (Figure 1) which uses AccuBridge® technology as the measurement system operated at ambient temperatures. The current range is from 1  $\mu$ A to 200 mA for use as a Quantum Hall Bridge and a Resistance Bridge. The 6020Q features increased ampere-turn (AT) sensitivity with more turns on both the master and slave windings and a new voltage feedback circuit to improve the linearity error of the nanovolt amplifier.



Figure 1 – 6800C System

Measurements International has world-class expertise in both DC Resistance metrology at NMI's and ISO 17025 Accreditation throughout the industry. As your accreditation partner and global support partner, MIL offers leading product knowledge and applications expertise through coaching, system design, implementation, calibration services, and ongoing expert support ensuring your competitive advantage.

**At MI, it's not only about the equipment and science, but it's also about what you can do and the ease with which you can do it.**

The AccuBridge® 6020Q (furthermore 6020Q) room temperature Quantum Hall Resistance Bridge can be used to characterize both GaAs/AlGaAs (Figure 2) or graphene samples by measuring and plotting the field sweep, the contact resistance ( $V_{cr}$ ), the

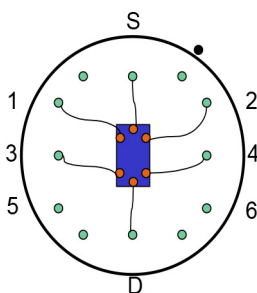


Figure 2 – 6800 Sample

longitudinal resistance and dissipation of the  $I = 2$  plateau ( $V_{xx}$ ), and transferring the Hall Resistance ( $V_{xy}$ ) to a 1 k $\Omega$  or 10 k $\Omega$  standard resistors.

Enhancements using AccuBridge® technology include a higher ampere-turn sensitivity covering a wider range of resistance ratio, a current and voltage feedback circuit for increased linearity performance and a new calibration technique with increased resolution in obtaining even tighter specifications. In addition to the updated technology, it has the 6010's dependability, simplified calibration, ease-of-use, automation, speed of measurement and worldwide support making the 6020Q the best and only resistance bridge that offers uncertainty specifications that rival anything available today.

The 6020Q is a fully automated bridge. Its speed, precision and measurement accuracy accounts for its preferred status as the primary resistance bridge in most NMIs throughout the world. It is designed for flexibility and ease of use and is perfectly suited for stand-alone resistor calibrations.



Figure 3 – 4210A Matrix Scanner

The 6020Q has two inputs:  $R_x$  and  $R_s$ . The number of inputs can be expanded to 40 when used in conjunction with the 4200 series Low Thermal Four-Terminal Matrix Scanners, see figure 3. It is recommended that the model 4210A 10-Channel Matrix Scanner be ordered for use in the Quantum Hall System. Measurements can then be performed automatically with the software. Delayed or scheduled measurements can be performed at any time. Automatic current reversal ensures that DC offsets and thermals are cancelled out of the measurement.

*See the 4200 data sheet for a complete range of Matrix Scanners.*

### Overview

As a stand-alone device, the 6020Q is capable of performing the sweep check, contact resistance, longitudinal potential difference (dissipation) and hall resistance measurements on the Quantum Hall Resistance (QHR) sample. You can select menu-driven functions using the front panel display or over IEEE-488. Also, you can use the 6020Q as a high accuracy



**Measurements International**  
*Metrology is Our Science, Accuracy is Our Business™*

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

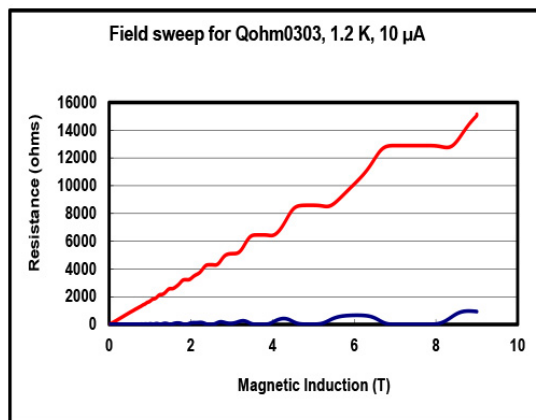


Figure 4 – Sweep Check Measurement

DC resistance ratio bridge for calibrating resistors using either a 1  $\Omega$  or 10 k $\Omega$  standard resistors. For laboratories without a QHR system, the 6020Q can be used to build up from the 1  $\Omega$  or down from the 10 k $\Omega$ .

The 6020Q performs the field sweep check measurement (see figure 4) by feeding a current, into the source and drain of the sample, and then reversing it. This enables the measurement of potential differences between various points on the sample. These potential differences can be measured at Hall resistances  $V_{xy}$  (1-2) or  $V_{xy}$  (3-4) and the longitudinal resistance  $V_{xx}$  (1-3) and  $V_{xx}$  (2-4) on the sample.  $V_{xy}$  (1-2) and  $V_{xy}$  (3-4) should be in close agreement with each other, as should  $V_{xx}$  (1-3) and  $V_{xx}$  (2-4).

The 6020Q's microvolt detector makes contact resistance measurements. It is important to measure the contact resistance each time the QHR device is cycled to room temperature and re-cooled as large contact resistances can lead to errors in the QHR measurement. The 6020Q uses a three-probe measurement on each of the contacts in turn to measure the contact resistance. The contact resistance is equal to  $V_{cr}/I$  = resistance of wire + resistance of contact + resistance of 2-DEG.

For an accurate transfer of the QHR value, the longitudinal potential difference must be measured. You can do this by measuring between  $V_{xx}$  (1-3) and  $V_{xx}$  (2-4) using the 6020Q's  $V_{xx}$  nanovolt mode. Take this measurement to verify that there is no dissipation (see figure 5) in the 2-DEG. When the 2-DEG is quantized,  $V_{xx}$  should go to 0 and should be  $< 2 \times 10^{-8}$  of  $V_{xy}$ .

For traceable measurements, use the keypad on the touch screen to enter the QHR value and related uncertainty in the resistor ID standards file and the 1000  $\Omega$  transfer resistor into the measurand (unknown) ID file. Enter standard resistors such as the 1  $\Omega$  or 10 k $\Omega$  into the standards file after they have been calibrated. Enter resistors to be calibrated into the measurand ( $R_x$ ) or unknown file. Using the keypad, enter measurement functions such as current through the unknown resistor, settle time, number of measurements, and number of statistics into the Programs file.

*Example (for stated specifications)*

*Maximum Current Reversal Rate = 12 seconds*

*Maximum Measurement Setting = 50 Measurements*

*Maximum Statistical Settings = 40 Measurements*

The 6020Q is compatible with all the QHR systems, both the 6800A and 6800B software, as well as both the 4220 and 4210 Matrix Scanners.

When performing resistance measurements, the 6020Q's low-noise, the touch screen display is interactive with the measurements. You can display data (several measurements at a time), a combination of data and a graph of the measurements, or just the graph. When a reading is complete, the average value and uncertainty (based on the number for statistics) are displayed. All uncertainty calculations are  $2\sigma$  level. For resistance measurements, the Summary screen displays measurement data as well as graphical information for current measurements, which can be viewed anytime in ratio or ohms.

### Windows® Based Operating Software

Measurements International's software features an MI report generation, historical analysis and tracks and corrects for resistor drift rates. Combined with a 9400 Standard Resistor Oil Bath or 9300A Air Bath, alpha and beta calculations can be performed automatically on resistors under test. All data can be exported directly to Excel for creating various test patterns or mainframe applications. Resistor baths (oil or air), instrument controllers, printers, system software, IEEE interface, installation, and training are all available from MI.





**Measurements International**  
Metrology is Our Science, Accuracy is Our Business™

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

The Main Manual Screen displays a graph of Ratio Measurements (PPM) over time. The Y-axis ranges from -1.000 to 1.000 PPM. The X-axis ranges from 0 to 10. The graph shows a flat line at 0.000 PPM. Below the graph, there are input fields for Temperature (K), Helium Level (%), and Magnet Field (T). The screen also includes a table for Resistor Information and Operation Information.

Resistor	Type	Value	Max. I (A)	Serial #	Is (A)	Ps (W)
1						
2						
3						
4						
5						
6						
7						
8						
9						

Main Manual Screen

The Resistor ID Listing screen displays a table of resistor data. The table has columns for Value (Ohms), Dev. from Nom, Cal Value, Cal Date, Drift / Month, Exp. Unc. (95%), D. of Freedom, and Scanner Ch. The table lists resistors sR1 through sR13.

Value (Ohms)	Dev. from Nom	Cal Value	Cal Date	Drift / Month	Exp. Unc. (95%)	D. of Freedom	Scanner Ch.
12906.4035	0.0000	12906.4035	3/3/2017	0	0	Infinite	None
sR1							
sR2							
sR3							
sR4							
sR5							
sR6							
sR7							
sR8							
sR9							
sR10							
sR11							
sR12							
sR13							

Resistor ID Listing

The Program Selection & Creation screen displays various settings and a table of resistors. The screen includes sections for Elements, Programs, Wait State Attributes, Wait States, and Measurements. The Measurements section includes a table of resistors.

Resistors	Is	Rev. Rate	# Mnts	# Stats	
M1	mR1 sR1 s	0.000077	8	35	25
M2					
M3					
M4					
M5					

Program Selection & Creation

The Rack & Rack Settings screen displays various settings and a table of resistors. The screen includes sections for Accu-6020SW, GPIB Mode, Scanners, Chub-E4, QHR System Meters, and APC Smart-UPS. The Scanners section includes a table of resistors.

Scanners	Chub-E4	QHR System Meters
Lakeshore Model 625	Cryocon Model 32	Cryomagnetics Model LM500

Rack & Rack Settings

The Measurement Options screen displays various settings. The screen includes sections for Save Options, Set Manual Readings, and Bath Temperatures. The Set Manual Readings section includes input fields for Temperature, Pressure, and Humidity. The Bath Temperatures section includes input fields for Standard Bath and Variable Bath.

Measurement Options

The History Information screen displays a graph of Resistor / Vxx History (ppm) and a table of data. The graph shows a flat line at 0.000 PPM. The table has columns for Date, Std. Dev., and Uncert. The screen also includes input fields for Resistor Serial Number, Today's Calculated Value, and buttons for Load History File and Open Saved History File in WordPad.

History Information



# Measurements International

*Metrology is Our Science, Accuracy is Our Business™*

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

### AccuBridge® 6020Q Accessories

#### Channel Extension



By using combinations of up to four matrix scanners, you can increase the number of input channels to almost any number from 10 to 40. Our Automated Low Thermal Matrix Scanners include the 4210A and 4210B with ten input and two output channels; 4216A, 4216B with 16 input and two output channels; and 4220A and 4220B with 20 input and two output channels. Our A-series of matrix scanners has tellurium copper terminals on their inputs and outputs while our B-series units have four-wire Teflon cable on their inputs and outputs.

*For more information, see our 4200 series model 4210, 4216 and 4220 Automated Low-Thermal Matrix Scanners data sheet.*

#### Model 9300 Air Bath



The model 9300 series Air Baths are designed as a convenient and inexpensive way to maintain the temperature of air resistors in your calibration laboratory. It is large enough to house several standard air resistors and features an adjustable shelf to permit easy access to the standards. The shelves are easily removable to place a single ESI type SR104 standard in the bath. The bath is small and rugged and may be moved about easily.

*For our complete range of Air Baths, see the 9300 data sheet.*

#### Model 9300A Temperature Controlled Chamber with IEEE-488



The 6020Q is also ideal for verifying the temperature and power coefficient of resistors or shunts using the MI 9300A Air Bath. Up to four SR104's or a combination thereof can be installed in the bath, two shelves are provided. The bath can be supplied without IEEE and with IEEE. The IEEE drivers for this bath are built into the software for automated measurements and calculations of alpha, beta coefficients and resistor values. A Hi/Lo temperature protection circuit is built into the bath to protect your resistors.

*For our complete range of Air Baths, see the 9300A data sheet.*

#### Model 9400 Oil Bath with IEEE-488



We designed our model 9400 Standard Resistor Oil Bath based on years of customer feedback on existing resistor oil baths. You control this bath through a touch screen interface. Due to its low electrical noise, the quiet 9400 can be used with the Cryogenic Current Comparator (CCC) and QHR standard. Depending on the number of resistors in the bath, the stirrer motor speed can be changed. The IEEE drivers for this bath are built into the software for automated measurements and calculations of alpha and beta coefficients and resistor values.

*For more information, see our 9400 series model 9400 Standard Resistor Oil Bath data sheet.*



## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

### Model 9331 & 9331R Series Air Resistors



Our high accuracy working standard air resistors are used for precision on-site resistance calibrations for values from 1 mΩ to 100 MΩ. Our 9331's are small, light, and rugged resistance standards that do not require a temperature-controlled oil or air bath for their specification range. The stability and temperature coefficients of the 9331's make them ideal for easy transport and for operation in any working environment within the range of 18 °C to 28 °C.

Connections to the model 9331R are made with tellurium copper 5-way binding posts for values to 10 MΩ. A separate ground terminal is included for guarding and the case is hermetically sealed to keep moisture out. The model 9331 ranges from 0.001 Ω to 10 MΩ.

*For more information, see our model 9331R Reference series Standard Air Resistors and model 9331 Standard Air Resistor data sheets.*

### Model 9210 Series Standard Oil Resistors



Oil resistors provide better stability and temperature coefficients over air resistors and provide the highest precision and stability in resistance measurements. Our standard oil resistors include the 9210A Primary 1 Ω, 9210A Primary 0.1 Ω, and 9210B series from 10 Ω to 100 kΩ. The 9210A 1 Ω and 9210A 0.1 Ω resistors have a negligible pressure coefficient.

*For more information, see our model 9210A MI-Type Standard and model 9210B Reference Series Standard Oil Resistors data sheets.*

ORDERING INFORMATION	
6020Q	Resistance Bridge with Software
4210A	10-Channel Matrix Scanner, terminal inputs
4210B	10-Channel Matrix Scanner, wire inputs
4216A	16-Channel Matrix Scanner, terminal inputs
4216B	16-Channel Matrix Scanner, wire inputs
4220A	20-Channel Matrix Scanner, terminal inputs
4220B	20-Channel Matrix Scanner, wire inputs
9300A	Air Bath
9400	Oil Bath
9210A/	Evanohm Resistor (1 Ω and 0.1 Ω)
9210B/	Oil Resistors 10 Ω, 100 Ω, 1 kΩ, 10 kΩ, 100 kΩ
9331R/	Air Resistors 1 Ω, 10 Ω, 100 Ω, 1 kΩ, 10 kΩ, 100 kΩ
J005-Spec 30/100	4-Conductor Teflon Cable, 30 m or 100 m



# Measurements International

*Metrology is Our Science, Accuracy is Our Business™*

## ACCUBRIDGE® 6020Q QUANTUM HALL RATIO/RESISTANCE BRIDGE

### Specifications: Rev 6

Note: Either $R_s$ or $R_x$ can be selected as the standard. 6020Q uncertainties in the bridge and software are specified at the $2\sigma$ level (95 %) this includes all secondary specifications such as linearity and noise with a $\pm 2^\circ\text{C}$ temperature variance.	0.1 $\Omega$ to 100 k $\Omega$			
	$R_x$	Ratio & Accuracy (ppm)*		
	--	1:1	10:1	14:1
	0.1 $\Omega$	< 0.02	--	--
	1 $\Omega$	< 0.015	< 0.015	< 0.015
	10 $\Omega$	< 0.015	< 0.015	< 0.015
	100 $\Omega$	< 0.015	< 0.015	< 0.015
	1 k $\Omega$	< 0.015	< 0.015	< 0.015
	10 k $\Omega$	< 0.02	< 0.015	--
	100 k $\Omega$	--	< 0.05	--

\*As a ratio device the accuracy specifications can be improved upon based on your standards and environmental conditions.

Measurement Mode	4-wire
Linearity	< 0.005 ppm of full-scale
Operating Conditions	10 $^\circ\text{C}$ to 35 $^\circ\text{C}$ , 10 % to 90 % RH non-condensing
Test Current Range	1 $\mu\text{A}$ to 200 mA
Test Current Resolution	18-bit
Interface	IEEE-488
Display	Touch-screen display (no external keyboard), resolution 0.001 ppm

#### Dimensions (W × D × H):

438 × 406 × 267 (mm)

#### Weight:

19 kg

#### Shipping Weight:

23 kg

#### Main Power:

100 V, 120 V, 220 V, 240 V<sub>ac</sub> – 50/60 Hz  
200 VA maximum

#### Corporate Headquarters

Measurements International  
PO Box 2359, 118 Commerce Drive  
Prescott, Ontario, Canada K0E 1T0

Phone: 613-925-5934

Fax: 613-925-1195

Email: sales@mintl.com

Toll Free: 1-800-324-4988

#### Worldwide Offices

##### MI-USA

Phone: 407-706-0328  
Email: sales@mintl.com

##### MI-China

Phone: +(86) 10-64459890  
Email: sales@mintl.com

##### MI-Europe

Phone: +(420) 731-440-663  
Email: sales@mintl.com

##### MI-Japan

Phone: +(81) 72 39 64 660  
Email: kaz@mijpn.com

##### MI-India

Phone: +(91) 98 10 134 932  
Email: sales@MILLP.co.in

