



MODEL 6800C QHR STANDARD



Cryogen-Free

6800C

- Cryogen-Free
- System Accuracy to < 0.02 ppm
- Built in Rxx (μ Volt) Measurements in ADCC Bridge
- Built in Rxx (nVolt) Measurements in ADCC Bridge
- 9 Tesla Standard System Magnet
- Up to 14 Tesla Available
- No Liquid Helium Required
- Stable Controlled Sample Environment
- Temperature Range 1.3 K to 300 K
- Low Operating Costs
- Direct Transfer to 1 k Ω and 10 k Ω Standards
- System Range 0.1 Ω to 100 k Ω
- Graphene Compatible
- Features AccuBridge® Technology
- Dual Sample Probe

The Quantized Hall Resistance (QHR) Standard is internationally recognized as the representation of the ohm and is the most stable resistance standard. Many national laboratories and industries need to provide highly accurate, traceable reference standards to support their hi-tech environments. Measurements International (MI) developed the new 6800C QHR Standard System to meet the needs of national laboratories and primary industrial laboratories worldwide.

The MI 6800C QHR System is a fully automated primary standard developed as an economic means to provide a highly reproducible resistance standard.

Liquid helium shortages, erratic deliveries, and steady price increases have become commonplace. This shortage, along with continuous price increases causes many labs to have difficulty efficiently reaching their measurement goals. The 6800C requires no liquid helium to operate.

The 6800C was developed over many years' experience in quantized Hall system design, resistance measurements, and cryogenics. It is modular in design and consists of three parts: sample, cryogenics system, and bridge measurement system. These components may be purchased separately.

Metrology is Our Science, Accuracy is Our Business™




Several options are available including extra QHR samples, 6800C software.

Sample

The QHE device is mounted on a special probe that passes through an airlock so as to maintain the system clean and free of atmospheric gas and other impurities that may otherwise condense. This is especially important when using unprotected QHE devices as they need to be protected from water contamination. Two probes are offered, one as described for metrology purposes and the second for general use as a research tool.

The system has been specially designed for a dual sample platform to allow for GaAs/AlGaAs and Graphene QHR sample use. Both samples can be inserted at the same time for sample to sample comparison.

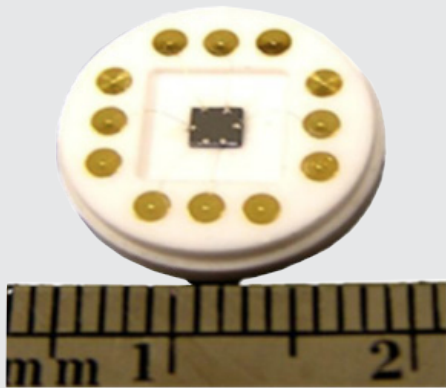

The standard sample platform has 8 electrical connections using PTFE insulated silver wiring to a TO8 socket. The probe is shipped with two TO8 sample platforms as standard. A copper cover protects the sample during insertion and removal.

The 6800C Resistance Standard sample provides the absolute value of resistance related to the von Klitzing constant of $25\,812.807\,4593\ \Omega$. Operating on step $i = 2$ plateau and $i = 4$ plateau, the 6800C compares the QHR value of $12906.40373\ \Omega$ to either a $10\ \text{k}\Omega$ or $1\ \text{k}\Omega$ resistor. The reference or sample, developed at the National Research Council of Canada (NRCC) for gallium samples, and developed at the National Institute of Standards and Technology (NIST) for graphene based samples.

The 6800C system also supports other manufacturers' samples.

CRYOGENICS

The 6800C offers customers ultra-reliable and high performance range of Cryogen-Free Magnet Systems with sample space temperatures ranging from 1.3 K to 300 K and magnetic fields up to 9 Tesla in our standard system – all without the need for liquid cryogenes. Special system designs are available to also offer customers a temperature range of 0.3 K to 300 K and magnet systems up to 14 Tesla.

The use of patented technology allows the whole system to be operated from a pulse-tube cryocooler. Reliable, precise and highly stable temperature control is achieved during normal measurement sequences.

Once connected to mains power these systems can be turned on and operational within several hours. With service intervals $\geq 30,000$ hours, the system may be used continuously over very long periods, or simply as needed, providing complete freedom to plan research work and optimize running costs.

The modular and configurable system architecture allows a variety of different sample probes to be used within a compact size single vertical field cryo-magnet to perform a wide range of measurements.

The integrated variable temperature insert (VTI) is cooled by the cryocooler and self generates a small volume of liquid ^4He from an external gas reservoir. The ^4He gas is cooled by a series heat exchanger which terminates in a Joule-Thompson valve. Here the gas expands, cooling and so condensing to provide the low temperature environment. An external mechanical vacuum pump is used to reduce the temperature to 1.3 K.



Samples are top loaded into the sample access column via an airlock and gate valve located at the top of the sample space to allow access to the centre of the magnet temperature controlled region. There is no need to bring the sample space to room temperature for sample exchange. Experienced operators can typically change samples in a few minutes.

The 6800C provides the precision-controlled environment in which all sample measurements are performed. Temperature control with stability at the mK level is achieved using a continuous flow of recirculating ^4He gas in the closed loop. This proven and reliable technology wastes no ^4He gas in normal operation and ensures precisely controlled stable sample temperatures in the range from below 1.3 K to 100 K.

The 1 W cryocooler provides sufficient cooling to ensure the temperature remains stable and homogeneous within 100 mK over a height of at least 5 cm from the bottom of the VTI, where the samples will be placed, even while sweeping the magnetic induction at 0.5 T/min rate.

Sample Space	30 mm / 40 mm	
Temperature Range (with Continuous Gas Flow in VTI)	Below 1.3 K to 100 K with 40 cubic metre scroll pump	
Temperature Control	5 mK @ 10 K 10 mK @ 100 K	
Typical Sample Cool-Down Time to 1.3 K	10 minutes with VTI cold	
Temperature Stabilization Time for a Typical 5 K Temperature Step and 0.1 K Temperature Range	Accuracy:	Set time:
	1 – 70 K	1 minute
	70 – 200 K	10 minutes
	200 – 300 K	15 minutes

Optional ^3He : Helium-3 Ultra Low Temperature Insert

The cryogenic range of Helium-3 inserts is designed to extend the range of experimental temperatures. Using only the cooling power of the VTI and two internal temperature controlled sorption pumps, the sample platform of the Helium-3 insert can be maintained at any temperature from below 300 mK to above 10 K.

The insert fits inside the 6800C variable temperature space and the ^3He pot has a working volume of liquid ^3He of approximately 1.5 cc. The standard insert features a gold-plated copper sample mounting surface. For QHR, use a TO8 socket is anchored to the ^3He pot with suitable low thermal voltage wiring to the socket from room temperature.

The QHR sample is mounted directly on the ^3He probe in an inner vacuum chamber. Because the sample is outside the ^3He reservoir it can be changed without risk of losing the ^3He charge. The sample is well grounded thermally and all the wiring to the sample is fully thermally grounded while maintaining the very high level of electrical insulation required for QHR work.

A thermometer and a heater is fitted to the ^3He insert to allow its temperature to be measured and controlled.



Base Temperature	< 300 mK
Working Temperature Range	< 300 mK – 100 K
Outer Diameter	22 mm (to suit 30 mm VTI)
³ He Capacity	Total ³ He gas volume 1.5 STP litres working volume in normal use approx 1.0 STP litres
Initial Cool Down Time	2 hours from room temperature sample change to ³ He condensation temperature under standard cryogen-free VTI operating conditions
Re-condensation Time	25 minutes to condense 90 % of ³ He charge and cool pot to below 2 K

Cryocooler Specifications

Cryocooler	
Cooling Powers at 50 Hz	1 st Stage: 35 W @ 45 K, 2 nd Stage: 0.9 W @ 4.2 K
Base Temperature	< 3 K
Orientation	Vertical Only
Maintenance Interval	30,000 hrs – 40,000 hrs
Ambient Temperature	5 °C to 35 °C
Compressor – F70LP/H (Water Cooled)	
Main Power Requirement	7.2 kW (steady), 8.5 kW (max), 3-phase F70LP: 200 V @ 50 Hz & 60 Hz F70H: 380 – 415 V @ 50 Hz – 480 V @ 60 Hz
Water Cooling	6.8 – 9 L/min
Ambient Temperature	5 °C to 35 °C
Charcoal Absorber Life	30,000 hrs
Flexible Gas lines	20 A × 20 m
Compressor Dimensions	W 444 mm, L 529 mm, H 576 mm
Weight	100 kg



Cooling Water

The Pulse Tube Cryocooler requires a continuous flow of cooling water. We recommend the use of a recirculating water chiller to provide a reliable source of cooling water for the compressor of the cryocooler. Chillers can be purchased as part of the complete system.

Magnet

The 6800C cryostat includes one of our liquid helium free superconducting magnets producing vertical magnetic field with central bore of 52 mm. The homogeneity of the magnet is 0.02 % over a volume of 1 cm³. The magnet is designed to operate with a 120 A 5 V power supply.

Maximum magnetic field range 9 Tesla Tesla
Central field homogeneity 0.02 % over 1 cm³ at field centre
Persistent mode decay rate 10 ppm/hr
Ramp rates 15 minutes to 9 Tesla

MEASUREMENT SYSTEM

The 6800C measurement system includes the AccuBridge[®] 6020Q ADCC bridge operating in room temperature air, enabling two resistors to be compared with accuracies to better < 0.02 ppm.

Since 1994, the 6010 technology has set the standard for DC Current Comparator (ADCC) Resistance Bridge performance in calibration laboratories globally. The time has now come to advance this best-in-class series, taking advantage of twenty-first century AccuBridge[®] ADCC technology.

Measurements International's (MI) major technological advantage in resistance measurements is the development of the only commercially available portable Quantum Hall System, 6800C, which uses a AccuBridge[®] ADCC technology bridge as the measurement system operated in ambient temperatures. Like all our ADCC bridges the current range is from 1 uA to 200 mA for use as a Quantum Hall Bridge and a resistance bridge. The ADCC 6020Q features increased ampere-turn sensitivity (more turns) on both the slave and master windings and a new voltage feedback circuit to improve on the linearity error of the nanovolt amplifier.

MI has world class expertise in both DC Resistance Metrology at NMI's and 17025 Accreditation throughout the industry. As your accreditation partner and global support partner, MI offers leading product knowledge and applications expertise through coaching, system design, implementation, calibration services and ongoing expert support insuring your competitive advantage.

It's not only about the equipment or the science...it's about what that will enable you to do, and the ease with which you can do it.

The AccuBridge[®] 6020Q room temperature ADCC Quantum Hall Resistance Bridge can be used to characterize both the GaAs/AlGaAs or graphene samples by measuring and plotting the field sweep, the contact resistance (V_{cr}), the longitudinal resistance and dissipation of the $i = 2$ plateau (V_{xx}) and transferring the Hall Resistance (V_{xy}) to a 1,000 Ω standard resistor.

Metrology is Our Science, Accuracy is Our Business™



Enhancements using AccuBridge® ADCC technology include a higher ampere-turn sensitivity covering a wider range of resistance ratio, a current and voltage feedback circuit for increased linearity performance and a new calibration technique with increased resolution in obtaining even tighter specifications. In addition to the updated technology, it carries the 6010's dependability, simplified calibration, ease-of-use, automation, speed of measurement and worldwide support making the 6020Q the best and only Resistance Bridge that offers uncertainty specifications that rival anything available today.

The AccuBridge® 6020Q is a fully automated bridge. Its speed, precision and measurement accuracy accounts for its preferred status as the primary resistance bridge in most NMIs throughout the world. It is designed for flexibility and ease of use and is perfectly suited for stand-alone resistor calibrations.


The AccuBridge® 6020Q has two inputs, R_x and R_s . The number of inputs can be expanded to 40 when used in conjunction with the 4200 series Low Thermal Four Terminal Matrix Scanners. Measurements can be performed automatically and with Measurements International's 6020Q software delayed or scheduled measurements can all be performed at any time. Automatic current reversal ensures that DC offsets and thermals in the bridge and scanner are cancelled out during the measurement. See the 4200 data sheet for a complete range of Matrix Scanners.

As a stand-alone device, the 6020Q is capable of performing the sweep check, contact resistance, the longitudinal potential difference (dissipation) and Hall resistance measurements on the QHR sample. Menu driven functions are selectable using the front panel display or over the GPIB-488. In addition, the 6020Q DCC current comparator bridge can be used as a high accuracy DC resistance ratio bridge in its own right for calibrating resistors using either a 1 Ω or 10 k Ω standard resistor. For laboratories that don't have a QHR system, the 6020Q can be used to build up from the 1 Ω or down from the 10 k Ω .

SAMPLE QUANTIZATION


Sweep Check Measurement: The 6020Q performs the field sweep check measurement by feeding a current into the Source & Drain of the sample and then reversing it. This allows the measurement of potential differences between various points on the sample. These potential differences can be measured at Hall resistances V_{xy} (1-2) or V_{xy} (3-4) and the longitudinal resistance V_{xx} (1-3) and V_{xx} (2-4) on the sample. V_{xy} (1-2) and V_{xy} (3-4) should be in close agreement with each other as should V_{xx} (1-3) and V_{xx} (2-4).

Contact Resistance Measurements are made using the microvolt detector in the 6020Q. It is important to measure the contact resistance each time the QHR device is cycled to room temperature and re-cooled as large contact resistances can lead to errors in the QHR measurement. The 6020Q uses a three probe measurement on each of the contacts in turn to measure the contact resistance. The contact resistance is equal to $V_{ct}/I = \text{resistance of wire} + \text{resistance of contact} + \text{resistance of 2-Deg}$. The contact resistance should be ideally less than 1 Ω .

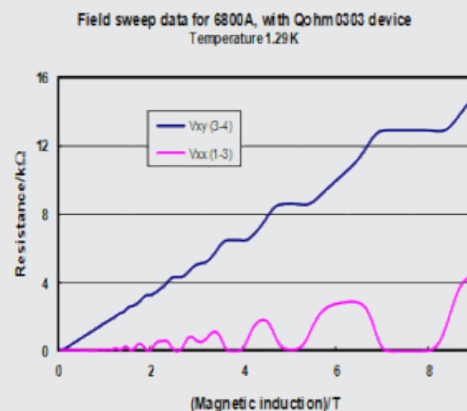



Dissipation: For an accurate transfer of the QHR value it is also necessary to measure the longitudinal potential difference. This can be accomplished by measuring between Vxx (1-3), and Vxx (2-4) using the 6020Q Vxx nanovolt mode. This measurement is taken to verify that there is no dissipation in the 2-Deg. When the 2-Deg is quantized Vxx should go to 0 and should be $< 2 \times 10^{-8}$ of Vxy.

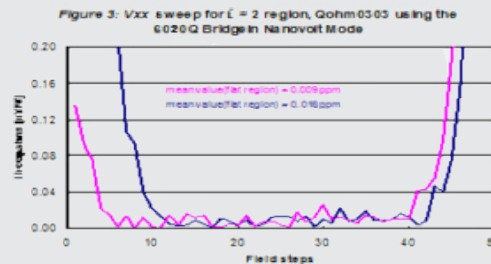

For traceable measurements, the QHR value and related uncertainty are entered in the resistor ID standards file and the 1,000 Ω transfer resistor into the measurand (unknown) ID file from the keypad. Standard resistors such as the 1 Ω or 10 k Ω are entered into the standards file after they have been calibrated. Resistors to be calibrated are entered into the measurand (R_x) or unknown file. Measurement functions such as current through the unknown resistor, settle time, a number of measurements and number of statistics are also entered into the Programs file using the keypad on the touch screen.



Full System Integration, Testing & Installation

All systems are fully tested in our works prior to delivery and the customer is welcome to visit at this time to observe the tests and receive training in its operation. Installation will be carried out by our engineers at the customers' site, at which time further training is given to the users.

We include an installation with time allowed for training of the system based on up to 3 days.

The system can operate with 50 or 60 Hz 3-phase high or low-voltage. (See Cryocooler Specifications)



ORDERING INFORMATION

Item	Description
CFMS-9T-30-H3	9 Tesla Cryogen-Free QHR System
CFMS-9T-30-H3- ³ He	9 Tesla Cryogen-Free QHR System with Helium-3
CFMS-14T-30-H3	Alternative 14 Tesla with 30 mm VTI
CFMS-14T-30-H3- ³ He	Alternative 14 Tesla with 30 mm VTI with Helium-3
Includes	Dual Sample TO8 Probe
	Mandatory Installation and Training

Spare Parts and Consumables

Description
Compressor Molecular Sieve Absorber to Suit Compressor (30,000 hours)
VTI Pump Spares Kit Tip Seal Scroll Pump (9,000 hours)
Ultragrade 19 Oil, 4 Litres, for Airlock Pump
Rotary Oil Mist Filter Element for Airlock Pump
Rotary Odour Removal Element for Airlock Pump

Options

Item	Description
Chiller	Water Chiller Required if Suitable Cold Water Supply is Not Available
4210A	10-Channel Matrix Scanner
4220A	20-Channel Matrix Scanner
9300	50 mK Temperature Controlled Air Bath – 50 Litres
9300A	15 mK Temperature Controlled Air Bath – 106 Litres
9400	2 mK Temperature Controlled Oil Bath
9210A/1	Evanohm Resistor (1 Ω and 0.1 Ω)
9210B	Oil Resistors 10 Ω , 100 Ω , 1 k Ω , 10 k Ω , 100 k Ω
9331R	Air Resistors 1 Ω , 10 Ω , 100 Ω , 1 k Ω , 10 k Ω , 100 k Ω
SPSCW30/100	4-Conductor Teflon Cable, 30 m or 100 m
Ga-Sample	Spare Gallium QHR Sample NRCC
6020Q-NMI-Cal	6020Q NMI Calibration 5 Points
6800C-NMI-Ver	6800C Verified Against NMI QHR

Corporate Headquarters

Measurements International
PO Box 2359, 118 Commerce Drive
Prescott, Ontario, Canada K0E 1T0

Phone: 613-925-5934
Fax: 613-925-1195
Email: sales@mintl.com
Toll Free: 1-800-324-4988

Worldwide Offices

MI-USA
Phone: 407-706-0328
Email: sales@mintl.com

MI-China
Phone: +(86) 10-64459890
Email: sales@mintl.com

MI-Europe
Phone: +(420) 731-440-663
Email: sales@mintl.com

MI-Japan
Phone: +(81) 72 39 64 660
Email: kaz@mijpn.com

MI-India
Phone: +(91) 98 10 134 932
Email: sales@MILLP.co.in



www.mintl.com

© Copyright 2019 Measurements International Limited - All rights reserved

Metrology is Our Science, Accuracy is Our Business™